



Southeast Aerospace, Inc
1399 General Aviation Dr
Melbourne, Florida 32935 USA
sales@seaerospace.com
Tel: 321-255-9877
Fax: 321-255-9608
www.seaerospace.com

Hawker 800/XP Capabilities List

Part Number	Model	Description	Capability
064-1015-01	KTR-953	HF Receiver/Exciter	SEA Repair, Spares, Exchange
064-1017-02	KAC-952	HF Antenna Coupler	SEA Repair, Spares, Exchange
071-1268-01	KA-594	HF Control Adapter	SEA Repair, Spares, Exchange
071-1270-01	KA-162	Dual HF External Capacitor	SEA Repair, Spares, Exchange
071-1274-02	KFS-594	HF Control	SEA Repair, Spares, Exchange
3LO-453/3		G-switch	SEA Spares
4006719-906	SM-200A	Servo Drive	SEA Spares, Exchange
4006719-913	SM-200A	Servo Drive	SEA Spares, Exchange
4016341-905	BA-141	Pressure Altimeter	SEA Spares, Exchange
453-5060	C406-N	ELT	SEA Repair, Spares, Exchange
501-1656-02	ADI-332B	Attitude Direction Indicator	SEA Spares, Exchange
60-1321-1		Power Supply	SEA Spares, Exchange
622-3702-011	BDI-36	Bearing Distance Indicator	SEA Spares, Exchange
622-3710-001	ANT-60B	ADF Antenna	SEA Repair, Spares, Exchange
622-3975-007	ALI-80A	Encoding Altimeter	SEA Spares, Exchange
622-4782-007	VSI-80A	Vertical Speed Indicator	SEA Spares, Exchange
622-5735-004	SMT-65	Servo Mount	SEA Spares
622-5812-001	FDU-70	Flux Detector Unit	SEA Repair, Exchange
622-6020-021	EFD-85	EFIS Display	SEA Spares, Exchange
622-6135-012	CCU-65	Control/Compensator Unit	SEA Spares
622-6342-024	EFD-86	EFIS Display	SEA Spares, Exchange
622-7194-201	VIR-432	Navigation Receiver	SEA Repair, Spares, Exchange
622-7309-101	DME-442	DME Transceiver	SEA Repair, Spares, Exchange
622-7382-101	ADF-462	ADF Receiver	SEA Repair, Spares, Exchange
622-7384-001	ANT-462B	ADF Antenna	SEA Repair, Spares, Exchange
622-8114-002	HF-9041	HF Antenna Coupler	SEA Spares, Exchange
622-8394-012	WXP-850B	Radar Control Panel	SEA Spares, Exchange

Part Number	Model	Description	Capability
622-8441-004	RTA-858	Radar Transceiver	SEA Spares, Exchange
622-8973-001	TRE-920	TCAS Antenna	SEA Spares, Exchange
622-9210-008	TDR-94D	Mode S Transponder	SEA Spares, Exchange
622-9238-042	ALI-850B		SEA Spares, Exchange
7001840-912	RT-300	Radio Altimeter Transceiver	SEA Repair, Spares, Exchange
7003110-901	ED-800	EFIS Display	SEA Spares, Exchange
7008471-801	WC-870	Weather Radar Control	SEA Spares, Exchange
7010133	FX-600	Flux Valve	SEA Spares
7012100-985	RM-850	Radio Management Unit	SEA Spares
7012640-902	WU-870	Radar Transceiver	SEA Spares, Exchange
7510100-911	RNZ-850	Integrated Nav Unit	SEA Spares
7510300-901	AT-860	ADF Antenna	SEA Spares
7510700-901	RCZ-850	Integrated Comm Unit	SEA Spares
7513000-801	CD-850	Clearance Delivery Control	SEA Spares
822-0101-002	HF-9031A	HF Transceiver	SEA Spares, Exchange
822-1115-001	VHF-422C	VHF Comm	SEA Repair, Spares, Exchange
822-1115-021	VHF-422C	VHF Comm	SEA Repair, Spares, Exchange
822-1168-002	SVO-3000	Primary Servo	SEA Spares, Exchange
822-1193-001	FDU-3000	Flux Detector Unit	SEA Repair, Spares, Exchange
93A055-60	A55B	CVR Microphone	SEA Repair, Spares, Exchange
KCA0104W		Compass	SEA Spares
LT-52A		Power Supply	SEA Spares
S100-0080-00	A100S	SSCVR	SEA Repair, Spares, Exchange
S65-247-12		VOR/LOC/GS Antenna System	SEA Spares
S67-1575-137		GPS Antenna	SEA Spares
S67-1575-165		Iridium/GPS Antenna	SEA Spares
S67-2002		Radio Altimeter Antenna	SEA Spares
SPS-1607A		Static Inverter	SEA Spares, Exchange
SPS-306B-3		Static Inverter	SEA Spares, Exchange
SSPD-113-13		Dual VOR Coupler	SEA Spares