



Southeast Aerospace, Inc
1399 General Aviation Dr
Melbourne, Florida 32935 USA
sales@seaerospace.com
Tel: 321-255-9877
Fax: 321-255-9608
www.seaerospace.com

Learjet 55 Capabilities List

Part Number	Model	Description	Capability
064-1015-00	KTR-953	HF Receiver/Exciter	Repair, Spares, & Exchange
064-1015-01	KTR-953	HF Receiver/Exciter	Repair, Spares, & Exchange
064-1016-03	KCU-951	HF Control	Repair, Spares, & Exchange
064-1017-01	KAC-952	HF Antenna Coupler	Repair, Spares, & Exchange
071-0019-00	KA-158	Bridging Amplifier	Repair, Spares, & Exchange
071-01519-0101	ART-2000	Radar Transceiver	Repair, Spares, & Exchange
071-1268-00	KA-594	HF Control Adapter	Repair, Spares, & Exchange
071-1268-01	KA-594	HF Control Adapter	Repair, Spares, & Exchange
071-1274-02	KFS-594	HF Control	Repair, Spares, & Exchange
1603-02-12	CVR-120	CVR	Spares, Exchange
2587193-43	C-14A	Directional Gyro	Repair, Spares, & Exchange
2593379-1	DRC-1	Dual Remote Compensator	Repair, Spares, & Exchange
2593379-001	DRC-1	Dual Remote Compensator	Repair, Spares, & Exchange
622-0876-001	VIR-30A	Nav Receiver	Repair, Spares, & Exchange
622-0876-201	VIR-30A	Nav Receiver	Repair, Spares, & Exchange
622-1204-004	339H-4	Rad Alt Indicator	Repair, Spares, & Exchange
622-1233-001	DME-40	DME Transceiver	Repair, Spares, & Exchange
622-1270-001	TDR-90	Transponder	Repair, Spares, & Exchange
622-1334-001	VHF-20B	VHF Comm	Repair, Spares, & Exchange
622-1879-001	VHF-20A	VHF Comm	Repair, Spares, & Exchange
622-2012-013	339F-12A	DME Indicator	Repair, Spares, & Exchange
622-2175-001	339F-12B	DME Indicator	Repair, Spares, & Exchange
622-2362-001	ADF-60A	ADF REceiver	Repair, Spares, & Exchange
622-2506-008	RMI-36	RMI	Repair, Spares, & Exchange
622-2855-001	ALT-55B	Rad Alt Transceiver	Repair, Spares, & Exchange
622-2937-004	ALI-55	Rad Alt Indicator	Repair, Spares, & Exchange
622-3918-002	IND-41	DME Indicator	Repair, Spares, & Exchange

Part Number	Model	Description	Capability
622-3919-002	IND-41A	DME Indicator	Repair, Spares, & Exchange
622-3920-002	IND-41B	DME Indicator	Repair, Spares, & Exchange
622-4523-017	CTL-20	Comm Control	Repair, Spares
622-4524-079	CTL-30	Nav Control	Repair, Spares
622-4526-033	CTL-60	ADF Control	Repair, Spares
622-4527-020	CTL-90	Transponder Control	Repair, Spares
622-4545-001	CTL-220	HF Control	Repair, Spares, & Exchange
622-4545-005	CTL-220	HF Control	Repair, Spares, & Exchange
622-4545-011	CTL-220	HF Control	Repair, Spares, & Exchange
622-4545-015	CTL-220	HF Control	Repair, Spares, & Exchange
622-5337-001	TCR-220	HF Transceiver	Repair, Spares, & Exchange
622-6137-001	VIR-32	Nav Receiver	Repair, Spares, & Exchange
622-6137-201	VIR-32	Nav Receiver	Repair, Spares, & Exchange
622-6152-001	VHF-22A	VHF Comm	Repair, Spares, & Exchange
622-6153-001	VHF-22B	VHF Comm	Repair, Spares, & Exchange
622-6263-001	DME-42	DME Transceiver	Repair, Spares, & Exchange
622-6520-005	CTL-22	Comm Control	Repair, Spares, & Exchange
622-6521-013	CTL-32	Nav Control	Repair, Spares, & Exchange
622-6522-005	CTL-62	ADF Control	Repair, Spares, & Exchange
622-6523-005	CTL-92	Transponder Control	Repair, Spares, & Exchange
622-7318-001	IND-42C	DME Indicator	Repair, Spares, & Exchange
622-7337-001	WXT-250B	Radar Transceiver	Repair, Spares, & Exchange
7000622-901	VG-14A	Vertical Gyro	Spares, Exchange
787-6366-002	614L-12	ADF Control	Repair, Spares, & Exchange
787-6366-008	614L-12	ADF Control	Repair, Spares, & Exchange
792-6275-004	614L-13	ADF Control	Repair, Spares, & Exchange
822-1115-001	VHF-22C	VHF Comm	Repair, Spares, & Exchange
822-1115-021	VHF-22C	VHF Comm	Repair, Spares, & Exchange
S703-1000-00	F1000	FDR	Spares, Exchange