



Southeast Aerospace, Inc
 1399 General Aviation Dr
 Melbourne, Florida 32935 USA
sales@seaerospace.com
 Tel: 321-255-9877
 Fax: 321-255-9608
www.seaerospace.com

Sikorsky S-61 Capabilities List

Part Number	Model	Description	Capability
121672-01-17	7000B	Vertical Gyro	SEA Exchange
124623-01-14	7000B	Displacement Gyro	SEA Exchange
1378-1B		Anti-Ice Controller	SEA Exchange
140100-01-01		Attitude Indicator	SEA Exchange
140100-03-01		Attitude Indicator	SEA Exchange
140190-01-01		Amplifier	SEA Exchange
140260-01-03		Gyro	SEA Exchange
163B2		Oil Temperature Indicator	SEA Exchange
163B2D		Oil Temperature Indicator	SEA Exchange
210-095-00		INDICATOR, LOAD CELL	
210-180-05		LOAD CELL, ANALOG	
210-187-00		LOAD CELL	
211C228-2		SWITCH, HYDRAULIC PR	
218C50-3		SWITCH, PRESSURE	
21B17-10B		PANEL, SUPERVISORY	
2312M-41-3		CONVERTER	
270-2436-040	613L-3	Transponder Control	SEA Repair
28B135-145AM		GENERATOR, AC	
28B135-151A		AC GENERATOR	
30E20-97A		GENERATOR, DC	
32005-007		GENERATOR, TACH	
393004-01884		INDICATOR, FUEL QTY	
4036370-0502	RT-1157A/APX-100(V)	IFF Transponder	SEA Exchange
4036370-0503	RT-1157B/APX-100(V)	IFF Transponder	SEA Exchange
522-3616-202	313N-4D	Nav Control	SEA Repair
522-3617-000	313N-5A	Comm Control	SEA Repair
55-A0521		BLOWER, AC	
566330-2		RATE GYRO	
566330-2T		RATE GYRO	
566330-XX		AC RATE GYRO	
566359-XX		ASE AMPLIFIER	
622-0876-011	VIR-30A	Nav Receiver	SEA Repair
622-0876-211	VIR-30A	Nav Receiver	SEA Repair
622-1205-004	339H-4A	Rad Alt Indicator	SEA Repair
622-1270-001	TDR-90	Transponder	SEA Repair
622-1879-001	VHF-20A	VHF Comm	SEA Repair
622-1879-002	VHF-20A	VHF Comm	SEA Repair
622-2175-004	339F-12B	DME Indicator	SEA Repair
622-3201-001	ALT-50A	Rad Alt Transceiver	SEA Repair
6300-C49A-155B1		INDICATOR, TORQUE	

Part Number	Model	Description	Capability
1719213		SWITCH, PRESSURE	
6607-1-41		SWITCH, PRESSURE	
1719229		SWITCH, PRESSURE	
6607-2-12A		SWITCH, PRESSURE	
66WBL200		PUMP, HYDRAULIC	
777-1492-003	51Y-7	ADF Receiver	SEA Exchange
792-6275-002	614L-13	ADF Control	SEA Repair
80-0092-7		Caution Panel	SEA Exchange
80-0093-1		Caution Panel	SEA Exchange
8AW61LVA1		VOLTMETER	
8DJ131AAB1		INDICATOR, TRIPLE TAC	
8DJ81CAA2		INDICATOR, NG	
921012-1	TFM-138	FM Transceiver	SEA Repair
94291901-01		INDICATOR, T5	
A2850-5		RATE GYRO	
A301-6A		Audio Panel	SEA Repair
A35MA10L2		ALTIMETER	
A6230-80217-004		INDICATOR	
A700AAP		RELAY	
A700AW		RELAY	
A711JDC		RELAY	
A770N		RELAY	
A770Q		RELAY START	
A927C		RELAY, OVERVOLTAGE	
AA34-100		Audio Interface	SEA Exchange
AA34-200		Audio Interface	SEA Exchange
AA34-300		Audio Interface	SEA Exchange
AA37-001		ICS Call/Alert System	SEA Exchange
AC-7-12411		ALTITUDE CONTROLLER	
AC-7-12585		ALTITUDE CONTROLLER	
AMS43		Audio Panel	SEA Exchange
AN3350-2		RELAY	
AN3370-1		RELAY	
B28071-12-302		GENERATOR, TACH	
CR279SE100A1		VOLTAGE REGULATOR	
DH7N		RELAY	
MGH159-200		INVERTER	
MGH159-200A		INVERTER	
MS28005-2		RELAY	
R1655-61777		TRANSFORMER	
RG11920-2		PUMP, FUEL BOOST	
RR36110		PUMP	
S-15-KAW		INDICATOR	
S6165-61500-061		SERVO, AUXILIARY	
SK676-1		CONTROL	
SR-150A		Pressure Indicator	SEA Exchange

Part Number	Model	Description	Capability
SR-151A		Pressure Indicator	SEA Exchange
SR-152A		Pressure Indicator	SEA Exchange
ST3A		TRANSMITTER, PRESS	
ST53A		TRANSMITTER, HYD	
ST62A		TRANSMITTER, PRES	
VR-1010-24-1A		REGULATOR, VOLTAGE	
XW20527-2		MOTOR, WIPER	